

# CAMLINK

## DELTA BATTERY CHARGER

### Owner's Manual

Thank you for purchasing the Camlink Delta battery charger. Please read this manual carefully. It contains important operating instructions. This Battery Charger can charge all AA or AAA Nickel Metal-Hydride (NiMH) and Nickel-Cadmium (Ni-Cd) rechargeable batteries. The built-in highly efficient switchmode power supply will adjust automatically to any voltage from 100-240V AC making it suitable for international use.

### Charging Instructions

1. Insert 2 or 4 pieces of AA/AAA rechargeable Ni-MH / NiCd batteries into the battery compartment, ensuring correct polarity ( + and - ) in accordance with the signs in the battery compartment.
2. Plug the charger into a household electric outlet (100-240V AC). The built-in switchmode power supply will adjust automatically to the mains voltage. When using in foreign countries, a plug adaptor may be required (not supplied). The Red LED will glow to indicate that the batteries are charging. Batteries should be charged for the times indicated in the table below, manually controlling the charging time.
3. Once charging is completed, remove batteries and unplug charger as soon as it is practical. Do not leave batteries in the charger. Unplug the charger when not in use.
4. Begin again at Step-1 to charge the next set of batteries.

### Charge Time

Type	Capacity	Chemistry	Manually Time For
AA	700 mAh	Ni-Cd	4 hours
AA	1300 mAh	Ni-MH	8 hours
AA	2100 mAh	Ni-MH	13 hours
AA	2500 mAh	Ni-MH	15 hours
AA	2700 mAh	Ni-MH	16.5 hours
AAA	600 mAh	Ni-MH	8 hours
AAA	800 mAh	Ni-MH	11 hours
AAA	1000 mAh	Ni-MH	14 hours

Charge time will vary depending upon the brand, capacity and condition of the batteries being charged.

### Important Safety Instructions

1. SAVE THESE INSTRUCTIONS. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.
2. When using in foreign countries a plug adaptor may be required (not supplied).
3. Before charging, read instructions.
4. This charger is intended for use with Nickel-Cadmium or Nickel-metal-hydride rechargeable batteries only. Attempting to charge other types of batteries may cause personal injury and/or damage to the charger.
5. Do not expose charger to rain or moisture. For indoor use only.
6. Remove from the mains when not in use.
7. Never use an extension lead or any attachment not recommended by manufacturer, otherwise this may result in a risk of fire, electric shock or injury to persons.
8. Do not operate the charger if it has been subjected to shock or damage. Take it to a qualified serviceman for repair.
9. Do not disassemble the charger. Incorrect reassembly may result in a risk of electric shock or fire.
10. Unplug the charger from mains outlet before attempting any maintenance or cleaning. Use a damp cloth to clean the surface, do not immerse into water.
11. The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
12. This power unit is intended to be correctly orientated in a vertical or floor mount position.
13. Before scrapping your charger, remove the batteries from the unit and ensure that they are disposed of safely.