

CAMLINK

USB10 BATTERY CHARGER

Owners Manual

Thank you for purchasing the Camlink USB10 Battery Charger. Please read this manual carefully. It contains important operating instructions. This charger will quickly and efficiently charge all AA or AAA Nickel Metal-Hydride (Ni-MH) or Nickel-Cadmium (Ni-Cd) batteries.

Warning

- Included batteries must be charged prior to first use.
- Charge only Ni-MH or Ni-Cd type batteries on this charger.
- Batteries may leak or explode causing personal injury if inserted improperly, disposed of in fire, mixed with other battery types, or short circuited.

Features

- Recharges 1 or 2 pieces of AA or AAA Ni-MH/Ni-Cd batteries at a time.
- 5V USB charging function.
- Automatic charging current selection for AA & AAA batteries.

Safety Features

- Reverse-polarity protection

Operating Instructions

1. Insert 1 or 2 pieces of rechargeable AA/AAA size battery into the battery compartment, ensuring correct polarity (+ and -) in accordance with the signs in the battery compartment.
2. Connect the charger into a standard USB port.
3. The green LED will glow to indicate that the batteries are charging. Batteries should be charged for the times indicated in the table below, manually controlling the charging time.
4. Unplug the charger and remove the batteries from the charger when not in use.
5. Begin again at Step 1 to charge the next set of batteries.

Charging Time

Type	Current	Capacity	Chemistry	Manually Time For
AA	200MA	1300 mAh	Ni-MH	7.5 hours
AA	200MA	2100 mAh	Ni-MH	12.5 hours
AA	200MA	2500 mAh	Ni-MH	14.5 hours
AA	200MA	2700 mAh	Ni-MH	15.5 hours
AAA	90MA	600 mAh	Ni-MH	6.5 hours
AAA	90MA	800 mAh	Ni-MH	9 hours
AAA	90MA	1000 mAh	Ni-MH	11 hours

Charge time will vary depending upon the brand, capacity and condition of the batteries being charged.

Important Safety Instructions

1. Before charging, read instructions.
2. This charger is intended for use with Nickel-Cadmium and Nickel-metal-hydride rechargeable batteries only. Attempting to charge other types of batteries may cause personal injury and/or damage to the charger.
3. Do not expose charger to rain or moisture. For indoor use only.
4. Remove from USB port when not in use.
5. Do not operate the charger if it has been subjected to shock or damage. Take it to a qualified serviceman for repair.
6. Do not disassemble the charger. Incorrect reassembly may result in a risk of electric shock or fire.
7. Unplug the charger from USB port before attempting any maintenance or cleaning.
8. The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
9. Before scrapping your charger, remove the batteries from the unit and ensure that they are disposed of safely.