

DIGICHARGER Plus

Verwendungsübersicht • Comparison list

Geeignet für Camcorder bzw. Digitalkameras
der folgenden Hersteller und baugleiche Typen:

Suitable for camcorders and digital cameras
of the following suppliers and types identical in construction:

*

**Canon • Casio • Fuji
Hitachi • JVC • Kodak • Konica
Kyocera • Minolta
Nikon • Olympus • Panasonic
Pentax • Polaroid • RCA • Ricoh
Samsung • Sanyo • Sharp
Sony • Thomson • Toshiba**

* Eingetragene Warenzeichen des jeweiligen Herstellers • Registered Trademarks of each manufacturer

Weitere aktuelle Informationen: • For further actual information see:
www.ansmann.de/digichargerplus

CANON* camcorders/cameras	battery type	adaptor	
ZR-10/25, POWER SHOT G1,G2 Pro 90	BP-511/512/522/535	7.2V	Base unit
ES-520A/4000/5000/6000/6500/7000/8000	BP-911/914/915/941	7.2V	Base unit
MV200	BP-924/927/930/945	7.2V	Base unit
IXUS 300/330/V/V2/V3, Elph PowerShot 5100/5110/300	NB-1L	3.7V	Adapter
IXUS 300/330/V/V2/V3, Elph PowerShot 5100/5110/300	NB-1LH	3.7V	Adapter
	NB2F12	7.4V	Adapter
PowerShotS30/S40/S50	BP-2L12	7.4V	Adapter
PowerShotS30/S40/S50	NB-2L	7.4V	Adapter
Canon SD-100, IXUS II	NB-3L	3.7V	Adapter
Canon SD-100, IXUS II	BP-3LCL (-850mAh)	3.7V	Adapter

CASIO* camcorders/cameras	battery type	adaptor	
EX-M1, EX-S1, EX-S1PM, S1, S3	NP-20	3.6V	Adapter
Casio QV-R Series	NP-30	3.7V	Adapter
	NP-40 (-1230mAh)	3.7V	Adapter

FUJI* camcorders/cameras	battery type	adaptor	
	DR-LB4	3.7V	Adapter
	NP-30	3.6V	Adapter
	NP-40	3.6V	Adapter
Finepix F401/601/50i,M603, Kodak LS420/LS443	NP-60	3.6V	Adapter
For Fuji FinePix 4800, 4900, 6800, 6900, MX-1700, 2700, 2900, 4900, 6800, 690, Kodak DC4800/EZ	NP-80	3.7V	Adapter
GC-QX3HD, GC-QX5HD, GC-S5, MX600, MX700	NP-100	3.6V	Adapter
Finepix M603	NP-120	7.2V	Adapter

HITACHI* camcorders/cameras	battery type	adaptor	
VME-340A/535LA/545LS/555LA/635LA/645LA/ 755LA/855LA	VM-BPL13/27/30/60	7.2V	Base unit
	VM-E330/535	7.2V	Base unit
VL-H575/500H/8300ES, VM-E330E/340E/E350A/ E520E/E535/E545LE	VM-NP500	7.2V	Base unit
VL-H575/500H/8300ES, VM-E330E/340E/E350A/ E520E/E535/E545LE	VM-N520	7.2V	Base unit

JVC* camcorders/cameras	battery type	adaptor	
GR-DVL9000U, GR-DVM1, GR-VBM1	BN-V812/814	7.2V	Base unit
GR-DVL SERIES	BN-V408/416/428	7.2V	Base unit
JVC GC-55, RCD-i700	BN-V101	3.7V	Adapter
	BN-V306 (-650mAh)	7.2V	Adapter
	BN-V312U (-1260mAh)	7.2V	Adapter
	JVC BN-V306 (-650mAh)	7.2V	Adapter
	JVC BN-V312 (-1300mAh)	7.2V	Adapter

KODAK* camcorders/cameras	battery type	adaptor	
For Fuji FinePix 4800, 4900, 6800, 6900, MX-1700, 2700, 2900, 4900, 6800, 690, Kodak DC4800/EZ	KLIC-3000	3.7V	Adapter
	KLIC-5000	3.7V	Adapter
	KLIC 5001 (-1700mAh)	3.7V	Adapter
KONICA* camcorders/cameras	battery type	adaptor	
Revio KD-300Z	DR-LB1	3.6V	Adapter
KD-400Z, 310Z, 500Z	DR-LB4	3.7V	Adapter

KYOCERA* camcorders/cameras	battery type	adaptor	
	BP-780S (-780mAh)	3.7V	Adapter
Finecam S3, PDR-3310	BP-800S	3.6V	Adapter
Finecam S3, PDR-3310	BP-1000S	3.6V	Adapter

MINOLTA* camcorders/cameras	battery type	adaptor	
	DR-LB1 (-800mAh)	3.6V	Adaptor
Digital Camera Dimage X	NP-200 (-750mAh)	3.7V	Adaptor
	NP-400 (-1300mAh)	7.4V	Adaptor
	NP-600 (-860mAh)	3.7V	Adaptor

NIKON* camcorders/cameras	battery type	adaptor	
Cool Pix885, Coolpix 775, Coolpix880, Coolpix995, E880	EN-EL1	7.4V	Adaptor
Coolpix 2500, Coolpix 3500	EN-EL2	3.7V	Adaptor
D100,D100 SLR	EN-EL3	7.4V	Adaptor
	EN-EL5 (-1100mAh)	3.7V	Adaptor

OLYMPUS* camcorders/cameras	battery type	adaptor	
	BP-LM1 (-1500mAh)	7.2V	Adaptor
C-50	DB-L10	3.7V	Adaptor
C-50	LI-10B	3.7V	Adaptor
Olympus C5000, 5060	PS-BLM1 (-1500mAh)	7.2V	Adaptor

PANASONIC* camcorders/cameras	battery type	adaptor	
VM-DS5, NV-DEC, PV-DV700/710, AG-EZ30U	VW-VBD1 / E	7.2V	Base unit
VM-DS5, NV-DEC, PV-DV700/710, AG-EZ30U	VW-VBD2	7.2V	Base unit
PV-SD5000, PV-SD4090	CGR-B202A	7.2V	Base unit
NV-DJ1 /DJ100/DS5/DX1/DX100, AG-BP25, PV-DBP5, PV-DV1000	AG-BP15P	7.2V	Base unit
NV-DJ1 /DJ100/DS5/DX1/DX100, AG-BP25, PV-DBP5, PV-DV1000	AG-BP25	7.2V	Base unit
NV-DJ1 /DJ100/DS5/DX1/DX100, AG-BP25, PV-DBP5, PV-DV1000	PV-DBP5	7.2V	Base unit
NV-GS10/30/40/50/70, PV-GS50/50S/70, VDR-M30	CGA-DU07	7.2V	Adaptor
NV-GS10/30/40/50/70, PV-GS50/50S/70, VDR-M30	CGA-DU14	7.2V	Adaptor
NV-GS10/30/40/50/70, PV-GS50/50S/70, VDR-M30	CGA-DU21	7.2V	Adaptor
NV-GS10/30/40/50/70, PV-GS50/50S/70, VDR-M30	CGA-S001E	3.7V	Adaptor
NV-GS10/30/40/50/70, PV-GS50/50S/70, VDR-M30	CGA-S002	3.7V	Adaptor
LUMIX DMC-F7-K	CGR-101	3.6V	Adaptor

PANASONIC* camcorders/cameras	battery type	adaptor	
	CGR-602A	7.2V	Adapter
	CGR-D120 (-800mAh)	7.2V	Adapter
	CGR-D220	7.2V	Adapter
	CGR-S101A	3.7V	Adapter
	CGR-S301A	3.7V	Adapter
	CGR-S602A (-1400mAh)	7.2V	Adapter
	CGR-S602E	7.2V	Adapter
SV-AV10-A, SV-AV10-R, SV-AV10-S	DMW-BC7	3.7V	Adapter
LUMIX DMC-F1, LEICA D-LUX	DMW-BCA7	3.6V	Adapter
SV-AV10-A, SV-AV10-R, SV-AV10-S	DMW-BL14	7.4V	Adapter
	DMW-BM7 (-680mAh)	7.2V	Adapter
	VW-VBA05 (-530mAh)	3.7V	Adapter
	VW-VBA10	3.7V	Adapter
	VW-VBAP10		Adapter
	VW-VBD07	3.7V	Adapter
SV-AV10-A, SV-AV10-R, SV-AV10-S	VW-VBP10	3.7V	Adapter
	VW-VBD14	3.7V	Adapter
	VW-VBD21	3.7V	Adapter

FUJI* camcorders/cameras	battery type	adaptor	
RPO.V730/V742	BB-065L	7.2V	Base unit

PENTAX* camcorders/cameras	battery type	adaptor	
Optio 330/430/450	D-L12	3.7V	Adapter
Optio550	D-L17	3.7V	Adapter
Optio S	D-L18	3.7V	Adapter

POLAROID* camcorders/cameras	battery type	adaptor	
	PR105DG (-720mAh)	3.6V	Adapter
KYOCERA/YASHICA FinecamS3	PR-110DG	3.6V	Adapter
	PR111DG	3.6V	Adapter

RICOH* camcorders/cameras	battery type	adaptor	
MX-1700/2700/2900, DC4800, PDR-M4/M5/M70	DB-30	3.7	Adaptor
RICOH CAPLIO RR10	DB-40	3.7	Adaptor
RICOH CAPLIO RR10	DB-43	3.7	Adaptor
	NP-40		Adaptor

SAMSUNG* camcorders/cameras	battery type	adaptor	
SC-L810/860	SB-L160/L320/L480	7.4V	Base unit

SANYO* camcorders/cameras	battery type	adaptor	
	VM-LC100	7.2V	Base unit
	DB-L10	3.7V	Adaptor
	DB-L20 (-720mAh)	3.7V	Adaptor
FINEPIX 6900/6800/4900/4800, FUJI MX-1700/2700/2900, PDR-M4/M5/M71	UR-211	3.7V	Adaptor
Cool Pix885, Coolpix 775, Coolpix880, Coolpix995, E880	UR-421	7.4V	Adaptor

SHARP* camcorders/cameras	battery type	adaptor	
Finecam S3, PDR 3310	AD-S30BT	3.6V	Adaptor
Finecam S3, PDR 3310	AD-S31BT	3.6V	Adaptor
Finecam S3, PDR 3310	AD-T50BT	3.6V	Adaptor
Finecam S3, PDR 3310	AD-T51BT	3.6V	Adaptor
VL-Z5,VL-Z7	BT-L226	7.4V	Adaptor

SONY* camcorders/cameras	battery type	adaptor	
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, MVC-FD 5/7/51/71/73/81/83/85/88/90/9	NP-F750/F750SP	7.2V	Base unit
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, DKC-ID1/MVC-FD 75/87/92/97/200	NP-F330	7.2V	Base unit
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, MVC-FD 5/7/51/71/73/81/83/85/88/90/95	NP-500	7.2V	Base unit
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, MVC-FD 5/7/51/71/73/81/83/85/88/90/95	NP-520	7.2V	Base unit

SONY* camcorders/cameras	battery type	adaptor	
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, MVC-FD 5/7/51/71/73/81/83/85/88/90/95	NP-F530	7.2V	Base unit
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, MVC-FD 5/7/51/71/73/81/83/85/88/90/95	NP-F550	7.2V	Base unit
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, MVC-FD 5/7/51/71/73/81/83/85/88/90/95	NP-F720/F730	7.2V	Base unit
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, MVC-FD 5/7/51/71/73/81/83/85/88/90/95	NP-F930	7.2V	Base unit
TRV-15/25/35/75/85/95/99, TR-67/87/940, GVA-500, MVC-FD 5/7/51/71/73/81/83/85/88/90/95	NP-F950/F960	7.2V	Base unit
DCR-VX1000/VX700, MVC-FD 5/7/51/71/73/81/83/85/88/90/95	NP-F730H	7.2V	Base unit
DCR-TRV8/TRV10, DSCS 50/70/30/S75/S85, MVC-CD200/300	NP-FM50	7.2V	Base unit
DCR-TRV8/TRV10	NP-FM70	7.2V	Base unit
DCR-TRV8/TRV10	NP-FM 90	7.2V	Base unit
DCR-TRV8/TRV10, DSCS 50/70/30/S75/S85, MVC-CD200/300	NP-QM51	7.2V	Base unit
DCR-TRV8/TRV10	NP-QM71	7.2V	Base unit
DCR-TRV8/TRV10	NP-QM91	7.2V	Base unit
DCR-PC1, DSC F55/505	NP-FS11	3.6V	Base unit
DCR-PC1, DSC P3/5/7	NP-F10	3.6V	Base unit
DCR-PC1, DSC P3/5/7	NP-F20	3.6V	Base unit
DCR-PC1, DSC P3/5/7	NP-F30	3.6V	Base unit
DCR-PC1, DSC F55/505	NP-FS21	3.6V	Base unit
DCR-PC1, DSC F55/505	NP-FS31	3.6V	Base unit
DCR-PC5, DSC P3/5/7	NP-FC10	3.7V	Base unit
DCR-1P7/IP5	NP-FF50/70	7.2V	Base unit
DCR-PC1, DSC F55/505	NP-FC11	3.7V	Base unit
DCR-PC7/10	NP-F300	7.2V	Base unit
DCR-PC7/10	NP-F100	7.2V	Base unit
DCR-PC7/10	NP-F200	7.2V	Base unit
	NP-FP50	7.2V	Base unit
	NP-FP70	7.2V	Base unit

SONY* camcorders/cameras	battery type	adaptor	
	NP-FR1 (-4.4Wh)	3.6V	Adapter
	NP-FT1 (-680mAh)	3.6V	Adapter
	LIP-10	3.7V	Adapter

THOMSON* camcorders/cameras	battery type	adaptor	
BAT600	BAT600	7.2V	Base unit

THOSIBA* camcorders/cameras	battery type	adaptor	
PDR-M4/M5/M72	PDR-BT1	3.7V	Adapter
PDR-M4/M5/M72	PDR-BT2	3.6V	Adapter

Weitere aktuelle Informationen: • For further actual information see:
www.ansmann.de/digichargerplus

ANSMANN ENERGY GMBH
 Industriestr. 10
 D-97959 Assamstadt • Germany
 e-Mail: verkauf@ansmann.de
 Internet: <http://www.ansmann.de>